

INSTALLATION INSTRUCTIONS

REPLACING EXISTING EXTERNAL IN-LINE FILTERS:

- 1. Find isolation valve which will be located somewhere on the water supply line to the fridge. Turn it off and to depressurise the system draw a large glass of water from the water outlet at the fridge.
- 2. Have a bucket and towel ready as there will be a small spillage of water during this process. Remove the old filter by depressing the locking collar at each end of the filter with your thumb nail (or similar) and at the same time null out the water supply line. Discard the old filter.



You can use your fingers or a firm edged object to hold down the locking collar, this will allow the hose to easily slide out.

Rinse your filter into a container or bucket to remove loose carbon and to activate the filter correctly.



- 3. Take the new filter, making sure the flow direction is correct and insert the inlet side only, the line will go in approx 5 10mm and you will feel it hit home.
- 4. MPORTANT Placing the filter in the bucket, turn on the water supply and allow about 5 litres of water to flow through the filter and into the bucket. This will remove a my loose carbon fines. Turn off the water supply and connect the line that feeds into the fridge. Turn on the water supply and run approx 2 litres through the system.
- 5. Complete the Replacement Due sticker and place in a visible area inside the fridge door.

RESET INSTRUCTIONS FOR SAMSLING EXTERNAL FILTERS

NOTE: The green light changes to orange after five months to indicate that you should soon change the water filter. It changes to red after an additional one month (6 months after the water filter was change or installed) to indicate that you must change the water filter. If the water filter indicator lights up red, press the ICE TIMER and ICE MODE buttons at the same time for about three seconds to reset the water filter indication light from red to green.

Alternative reset for Samsung-press the ice type and child lock buttons simultaneously for 3 seconds, toke: Hold the for Van Serondy 3 seconds. If you press these 2 buttons simultaneously for 5 seconds, the reset function ceases. Release the buttons and repeat the same step one more time. The water filter indicator links thould turn green.

If your external filter currently has threaded fittings (plastic or brass) please note the following instructions: (upgrade from WSF100 – see information over page)



Unscrew your fitting and remove hose from old filter. Follow steps 3 – 5 for replacing filters as noted above IMPORTANT: the end of the hose needs to be neatly cut and maintain it's circular structure. If the hose is damaged in any way use a sharp Stanley knife to cut off the unsuitable portion of hose. To remove hose from the new fitting, hold down the locking collar firm against the filter and the hose will slide out smoothly.